

Instruction for use


1. Using warm water and washing up liquid, wash all the removable parts and the inside of the water tank, rinse and dry.
2. Place the base unit on a stable surface, put the turbo ring around the heating element (the largest side on the bottom).
3. Pour the fresh water directly into the water tank up to the maximum level.
4. Place the base into the baskets and put the food on the center of base.
5. Place the baskets on the top of the juice collector, and put the lid on.
6. Plug in and set the time for recommended cooking times (see table of cooking times), the indicator light on and steam cooking has begun.
7. Check the water level by looking the exterior water level indicator, if necessary, add water from the side of juice collector during cooking.
8. The switch off automatically, timer rings and the indicator light off.
9. You can reheat the food , carefully if there is any more water.
10. Remove the lid, place the basket(s) on the plate.
11. Unplug the appliance, let it cool completely before cleaning.

Cleaning and maintenance

1. Empty the water tank and clean it with a damp cloth.
2. All the other removable parts can be put in the dishwasher.
3. Descale the appliance every 8 times.
4. Position the turbo ring upside down around the heating element (the largest side on the upper). Fill the water tank with cold water up to "MAX" level, fill the inside of the turbo ring with white vinegar to the same level. Do not heat up (to avoid the descaling odour). Leave overnight to descale. Rinse out the inside of water tank with warm water several times.
5. Stack the baskets one to the other following No.1 into No.2, then together into No.3. Put the rice bowl into the Steamer basket No.1. At last place the baskets on the juice collector and put lid over them all.


INSTRUCTION MANUAL STEAMER COOKER

Model No: HY- 4401NS

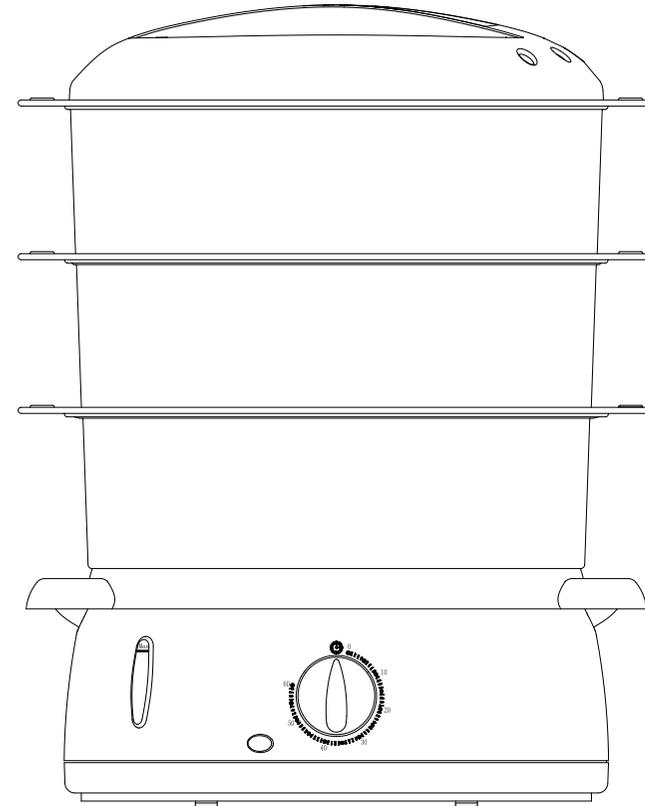

NINGBO HONGYI MANUFACTURE ELECTRONICS CO., LTD
Guan Hai Wei Industrial Zone East Area
Guan Hai Wei Town 315314 Shiqiao Cixi Ningbo China
TEL: 86-0574-63668838 FAX: 86-0574-63668745

*depending on model

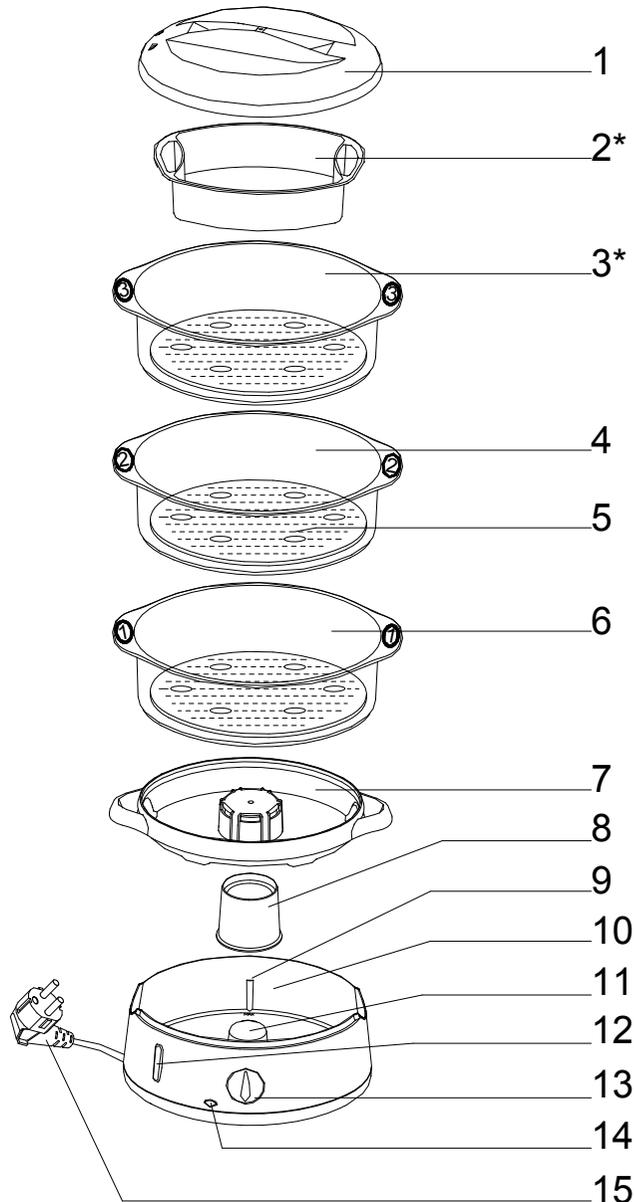

Description

1. lid
2. rice bowl (1L capacity)
(depending on model)
3. Steam basket No.3
(depending on model)
4. Steamer basket No.2
5. base with clip and
built-in egg holder
6. Steamer basket No.1
7. Juice collector
8. Removable turbo ring
9. Inside Maximum water level
10. Water tank
(1 hour continuous use)
11. Heating element
12. Exterior water level indicator
13. 60-minute timer
14. On indicator light
15. Power cord



**Please follow the instruction for use carefully!
This appliance produce boiling hot steam!**

Safety instruction

1. Check that the power supply voltage corresponds to that shown on the appliance.
2. Do not place the appliance near the hot source or in a hot oven, as serious damage could result.
3. Never leave the appliance in operation unattended. Keep away from children.
4. Do not use the appliance if the appliance or the cord is damaged, or the appliance has fallen or shows visible damage or does not work properly.
5. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
6. **Burns can occur by touching the hot surface of the appliance, the hot water, the steam or the food.**
7. Never immerse the appliance in water!
8. Do not move the appliance when it is full of liquid or hot foods.
9. Do not touch the appliance when it is steaming and use oven gloves to remove the lid, rice bowl and steamer baskets.
10. Always unplug the appliance immediately after use , when moving it or prior to any cleaning or maintenance.

11. This appliance is not intended for use by persons(including children) with reduced physical,sensory or mental capabilities,or lack of experience and knowledge,unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.Children should be supervised to ensure that they do not play with the appliance.
12. This appliance cannot be operated by an individual timer or remote or remote set