


# INSTRUCTION MANUAL

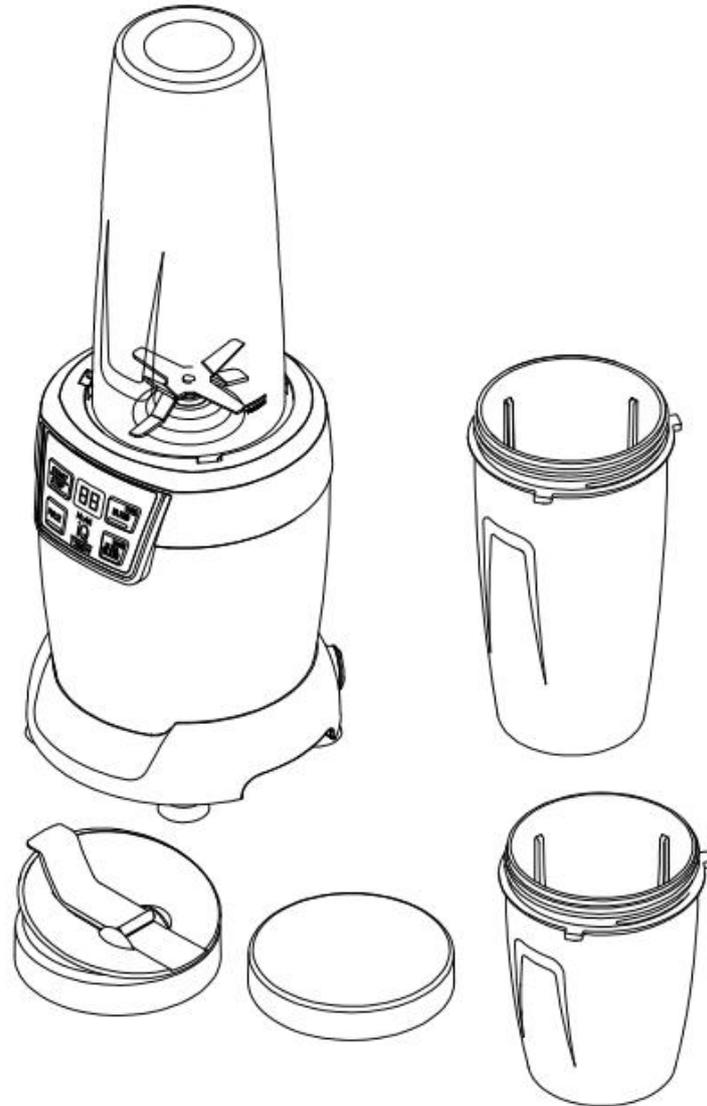

**BLENDER WBL-003**

**Ningbo Winlim Electric Appliance Co., Ltd**

# IMPORTANT SAFETY INSTRUCTIONS

## For Household Use Only

**WHEN USING ELECTRICAL APPLIANCE, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED, INCLUDING THE FOLLOWING:**

READ ALL INSTRUCTIONS BEFORE USING YOUR BLENDER

### **WARNING:**

1. To protect against electrical shock, do not submerge the appliance or allow the power cord to come into contact with water or any other liquid.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. DO NOT allow young children to operate the appliance or use as a toy. Close supervision is necessary when any appliance is used by or near children.
4. Never let the appliance operate unattended.
5. Remove the power cord from the electrical outlet when not in use, before assembling or disassembling parts and before cleaning. To unplug, grasp the plug and pull from the electrical outlet. Never pull from the power cord.
6. DO NOT abuse the power cord. Never carry the appliance by the power cord or yank it to disconnect from electrical outlet; instead grasp the plug and pull to disconnect.
7. DO NOT operate any appliance with a damaged cord or plug, or after the appliance malfunctions, has been dropped or damaged in any manner.
8. If the power cord is damaged, it must be replaced by the manufacturer, a certified service agent or similarly qualified persons in order to avoid a hazard.
9. DO NOT let the power cord hang over the edge of table or counter or touch hot surfaces such as the stove.
10. Always use appliance on a dry, level surface. Sinks, drain boards or uneven surfaces must be avoided.

11. Keep hands, hair, clothing, as well as utensils out of jar while processing to reduce the risk of severe injury to persons or damage to the appliance. A scraper may be used but only when the appliance is not running.
12. CAUTION: Blade assembly is sharp, handle with care. When handling the blade assembly, always hold by the base of the blade assembly.
13. Avoid contact with moving parts.
14. DO NOT attempt to sharpen blades.
15. DO NOT use the appliance if blade assembly is bent or damaged.
16. To reduce risk of injury, never place the blade assembly on the base without the proper attachment.
17. DO NOT operate this appliance on or near any hot surface (such as gas or electric burner or in a heated oven).
18. The use of attachments or accessories not recommended or sold by the manufacturer may cause fire, electric shock or personal injury.
19. DO NOT remove the jar from the motor base while the appliance is running.
20. To reduce the risk if injury, NEVER operate the appliance without the blade assembly in place; DO NOT try to defeat the interlock mechanism; make sure that the attachment is properly installed before operating the appliance.
21. DO NOT expose jars to extreme temperature changes.
22. CAUTION: DO NOT PROCESS HOT FOODS OR HOT LIQUIDS.
23. DO NOT overfill.
24. DO NOT operate the appliance empty.
25. If the appliance overheats, a thermal switch will become activated and shut off the motor. To reset, unplug the appliance and let it cool down for approximately 30 minutes before using again.
26. THIS PRODUCT IS INTENDED FOR HOUSEHOLD USE ONLY. Do not use this appliance for anything other than its intended use. Do not use outdoors.

27. Appliance accessories are not intended to be used in the microwave. Do not place the jar or the lid in the microwave as it may result in damage to the accessories.

28. Check the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.

29. Never immerse the motor unit in water or any other liquid, not rinse it under the tap. Use only a moist cloth to clean the motor unit.

30. Unplug the appliance immediately after use.

31. Keep the appliance out of the reach of children.

32. Always unplug the appliance before you start cleaning the appliance.

33. Do not use the attachment that other manufacturer produces or other parts.

34. To avoid occurring danger, please assemble product correctly.

35. Make sure the blade is securely fastened to the accessories before you assemble them onto the motor unit.

36. Do not attempt to repair or disassemble the appliance. There are no user-service able parts.

37. Extreme caution is necessary when moving any appliance containing hot liquids.

38. Do not use the jars in microwave.

39. Be careful if hot liquid is poured into the blender as it can be ejected out of the appliance due to a sudden steaming.

**NOTE:** The product and its packaging have been manufactured from valuable materials that can be recycled. This reduces the amount of refuse and helps to preserve the environment.

Dispose of the packaging in the proper manner. Make use of the local facilities provided for collecting paper, cardboard and lightweight packaging by type.

 **WARNING:** Extension cords are not recommended for use with this product.

# **SAVE THESE INSTRUCTIONS**

## **TECHNICAL SPECIFICATIONS**

Voltage: 220~240V 50/60Hz

Power: 1200W

Jar Capacity:

0.5L


0.7L

1.0L


NOTE: As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated from the packaging.

# Contents


Getting to know your blender -----  
Before first use-----  
Use-----  
Suggested Uses-----  
Care & Maintenance-----  
Troubleshooting Guide-----  
Replacement Parts-----  
Warranty & Registration-----

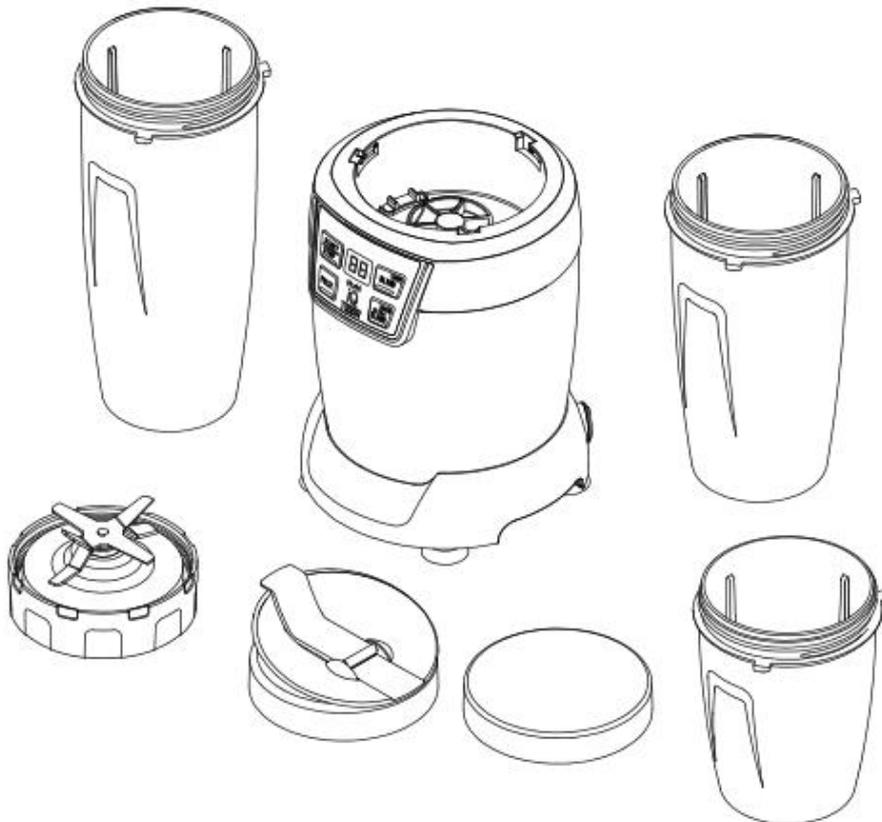


## Getting To Know Your Appliance

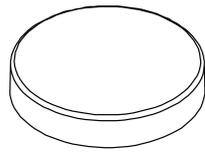


A

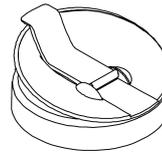


B

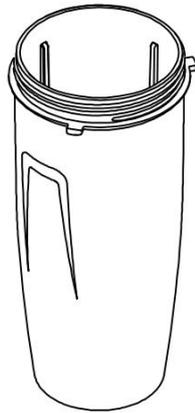


C

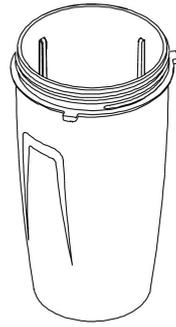


D

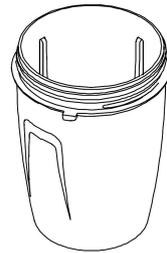

E

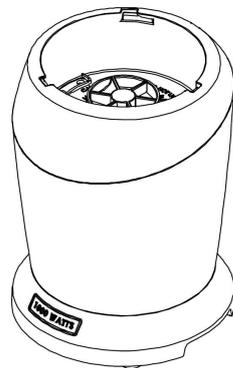

F

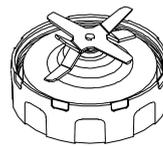

G

A Seal Lid

B Sip & Seal Lid

C 1.0L Jar

D 0.7L Jar

E 0.5L Jar

F Motor Base

G Blade Assembly

### **NOTE: Attachments are interchangeable.**

The blender is a high powered innovative tool with a compact design and outstanding performance. It is perfect for ice crushing, chopping, blending and nutrient and vitamin extracting. Blend and go with the convenient Sip & Seal lids, create delicious drinks to get you out the door quickly! Best results are achieved when you Pulse.

Welcome to the Winlim Nutri-iQ Experience! The Winlim Nutri-iQ Features pre-programmed settings that take the guesswork out of drink making. These programs are timed to deliver consistent, delicious results that finish on their own so all you have to do is press a button and enjoy!

#### **FEATURES:**

**Nutrient & Vitamin Extraction**

**1200 Watt Motor**

**User Interface:**

##### **START/STOP**

Press once to start continuous running, press again to stop.

Timer counts up by seconds, up to 60 seconds.

##### **PULSE**

Runs only while pressed down. Short presses make short pulses.

Timer counts up by seconds as long as pressed down.

##### **NUTRI-iQ BLEND**

Pulses and blends fresh or softer ingredients to create consistent results. Timer counts down.

##### **NUTRI-iQ ULTRA BLEND**

Pulses and blends frozen, fibrous or hard ingredients to create smooth consistent results. Timer counts down.

**Personalized, healthy drinks and juices on the go**

**BPA free Jars**

## **BEFORE FIRST USE**

Before using your appliance for the first time, it is important that you read and follow the instructions in this use and care booklet, even if you feel you are familiar with this type of appliance.

Your attention is drawn in particular to the section dealing with the appliance. Find a safe and convenient place to keep this booklet handy for future reference. This appliance has been designed to operate from a standard domestic power outlet. It is not intended for industrial or commercial use. Carefully unpack the appliance. Remove all packing materials and either discard or retain for future using.

Ensure that the voltage of your electricity supply is the same as that indicated on the rating label of the appliance. Remove the plastic accessories and wash them in warm soapy water. Dry thoroughly and replace. Wipe over the exterior of the Motor Base with a damp sponge or cloth. Do not use abrasive cleaners.

### **PLEASE KEEP THESE IMPORTANT SAFEGUARDS IN MIND WHEN USING THE APPLIANCE:**

**IMPORTANT:** Attachments are interchangeable.

**CAUTION:** Blades are sharp! Use extreme caution when handling the blade assemblies. Always hold them by the base of the blade assembly.

**IMPORTANT:** Never run the appliance empty.

**CAUTION:** Never attempt to remove the jar while the appliance is still running.

**WARNING:** Never leave the appliance unattended while in use.

1. Remove all packaging material and labels from the appliance.
2. Wash the lids, jars and attachments in warm, soapy water with a soft cloth. Use caution when washing the blade assemblies as the blades are very sharp.
3. Rinse and dry thoroughly
4. Jars, lids and attachments are all dishwasher safe. It is recommended that the lids and attachments be placed on the top rack. Ensure that the attachments are removed from the jars before placing in the dishwasher.
5. Wipe the motor base clean with a damp cloth.

**Use**  
**ASSEMBLY**



Fig. 1

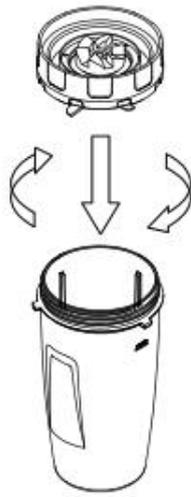


Fig. 2

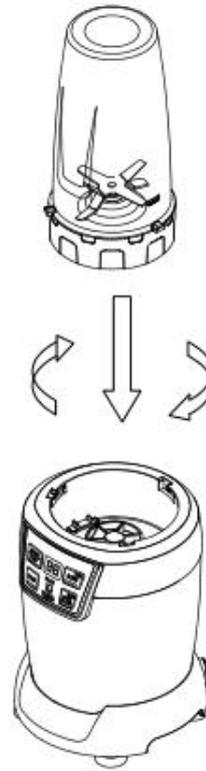


Fig. 3

**REMOVAL**

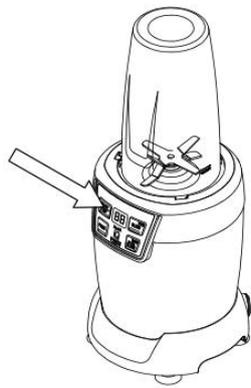


Fig 4

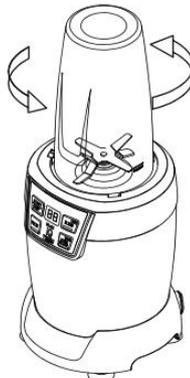


Fig 5

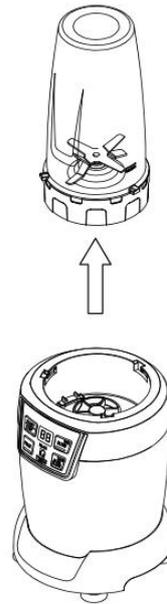


Fig 6

**IMPORTANT:** Place the motor base on a clean, dry, level surface such as a counter or table top.

1. Make sure that the motor base is plugged in for use.  
No lights will turn on.

2. Add ingredients to the jar.

**NOTE:** Do not overfill! To avoid spilling, do not add ingredients past the “Max” fill line.

3. Place the blade onto the jar and twist it on tightly until you have a good seal.(Fig. 1)

4. Turn the jar upside down and place it onto the motor base, aligning the tabs on the jar with the motor base, aligning the tabs on the jar with the motor base. Turn it clockwise, until you feel it click into place. The unit is ready for use.(Fig. 2)

5. Press one of the buttons to activate. (Fig.3)

**NOTE:** When using the Nutri-iQ presets, the unit will operate using pulses, pauses and continuous runs. The pauses allow the contents of the cup to settle. When the timer reaches “0”, it will stop by itself.

6. To remove the jar, ensure that the motor has stopped running. Then turn the jar counter clockwise. .(Fig. 4) and pull straight up to remove(Fig. 5)

7. Turn the jar upright and remove the Blade Assembly by twisting the blade assembly counter clockwise. Be sure to store the Blade Assembly attached to an empty jar when not in use.

8. Twist the Sip & Seal lid onto the jar to enjoy your drink on the go. Press flip top cap firmly into the opening to get the best seal. The flip top cap locks open when pressed backward.

9. Make sure that the motor base is unplugged when not in use.

10. To remove the motor base unit, tip the unit forward from the rear to easily disengage the suction cups.

## SAFETY FEATURES:

### Built-in safety lock

The blender has a built-in safety lock feature. This ensures that you can only switch on the appliance while the cup and the blade subassembly are assembled on the motor base securely. If the appliance is correctly assembled, the built-in safety lock will be unlocked.

**IMPORTANT:** In the base of each blade's collar, there is a silicone gasket seal that creates an airtight fit with the jars. After dishwashing and before each use, always check to make sure the gasket is properly in place, as the heat from some dishwashers may cause the gasket to become loose.

**WARNING:** Do not operate the motor continuously for more than 60 seconds at a time. Allow the motor to rest for 180 seconds before continuing.

**NOTICE:** If the blade is not running smoothly, stop the product and add some liquid, or reduce the ingredients in the cup.

**NOTE:** To prevent product overheating, dry ingredients must not be processed for more than 30 seconds at a time.

## Suggested Uses

PURPOSE	SUGGESTED JAR	TYPE OF FOOD
Chopping	0.5L 0.7L	Nuts Chocolate
Grating	0.5L	Cheese Bread Crumbs
Mixing	0.5L 0.7L	Batters Dips
Sauces	0.7L 1.0L	Vinaigrettes Salad Dressings Simple Sauces
Frozen Blending	0.5L 0.7L 1.0L	Ice Frozen Fruit Ice Cream
Nutrient Juices/Smoothies	0.5L 0.7L 1.0L	Fruits Vegetables Leafy Greens

**CAUTION:** DO NOT process dry ingredients without adding liquid to the jar. This product is not intended for dry blending.

## Care & Maintenance

### HOW TO CLEAN

**CAUTION:** Make sure that the motor base is unplugged from the power source before inserting or removing any attachment and before cleaning.

**NOTICE:** Wait until the blender has cooled down sufficiently before cleaning it.

**CAUTION:** DO NOT immerse the motor base into water or any liquid, or place into a dishwasher.

1. Separate/remove all parts from each other.
2. Clean the motor base with a slightly damp cloth and wipe dry
3. Place jars in the dishwasher. Place the lids and attachments on the top rack. Use caution when handling the blade assemblies as the blades are very sharp.
4. Whenever possible, rinse parts immediately after processing to make cleanup easier.
5. Store the product in a cool, dry place.

### NOTE:

You may also wash the jars by filling the jar to the Max fill line with warm water and drop of dish washing detergent, placing the blade assembly on the jar and pulsing a few times. Do not fill the jar more than Max fill line with water because it will overflow. Once clean, remove the jar from the motor base. Rinse the jar, attachment and lid under running water. Allow all the parts to dry before storing.

Do not use scouring pads, abrasive cleaning agents or aggressive liquids such as petrol, alcohol or acetone to clean the appliance

All detachable accessories can be cleaned in dishwasher.

### Tips:

Use a small brush(not included) to remove particles of food lodged underneath the blades.

If some leftover particles dry onto the inside of the jar, fill the cup about 2/3 full with warm water and attach the blade subassembly. Place the jar and blade subassembly onto the motor base and operate the appliance for

about 20-30 seconds to help loosen the stuck ingredients. Repeat the above step but use clean tap water. Empty blender and dry thoroughly.

**CAUTION:** Do not attempt to remove blades from the Blade subassembly for cleaning.

### HOW TO STORE

1. Store the appliance upright. Do not place anything on top. Store the jars and the rest of the attachments along side the appliance where they will not be damaged and won't cause a hazard.
2. Remove and empty the jar and ensure that no food is jamming the cutting blades.
3. Allow the appliance to cool for approximately 30 minutes.
4. Re-install the jar onto the base and re-plug the appliance into the electric outlet.
5. Proceed to use the appliance as before while making sure not to exceed the recommended maximum jar capacities.

## Troubleshooting Guide

PROBLEMS	POSSIBLE REASONS & SOLUTIONS
Motor doesn't start or attachment doesn't rotate.	For the jars, make sure that the tabs are seated in the slots and turned clockwise
Food is unevenly chopped.	Either you are chopping too much food at once, or you are not pulsing properly. Reduce the amount of food in the jar.
Food is too finely chopped or too watery	The food has been over processed. Use short operating for best results.
You can not achieve snow from ice cubes.	For best result use ice straight from the freezer. Try using short operating instead of long one. Make sure the jar is completely dry before adding ice.
Jar is leaking	Make sure that your lid or blade assembly is properly assembled to the jar. Leaking may occur if it is misaligned when twisted onto the jar. Turn the lid tightly clockwise.

Unit doesn't turn on	Make sure the unit is plugged in. Make sure the blade assembly is properly assembled to the jar and that is not misaligned
Unit doesn't turn off	Unplug the power cord from the electrical outlet and call customer service for support
Doesn't mix well	Pulse ingredients for best results. Press down on the jar in short intervals for even blending and chopping. For frozen ingredients, pulse in short intervals of 2-5 seconds and repeat.
Lid/blade assembly will not properly align to the jar	Set the jar on a level surface. Place the lid or blade assembly on top of the jar and align the threads so that the lid/blades sit flat on the jar. Twist clockwise so that the lid/blades evenly align to the jar until you have a tight seal.

## WARRANTY INFORMATION

The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 1 year, starting from the date on which the appliance is sold to the end user.

The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service centre. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted

The warranty will not be applied in case of:

- Normal wear and tear
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
- Use of force, damage caused by external influences.
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliances



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

