


# AICOK

## KETTLE INSTRUCTION MANUAL

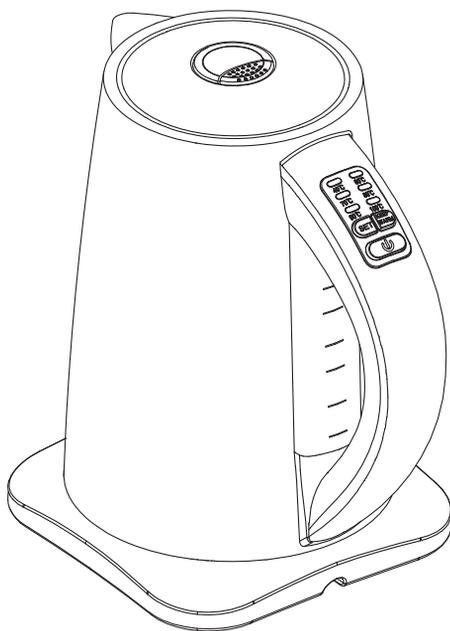

KE7466T-GS

READ THIS BOOKLET THOROUGHLY  
BEFORE USING AND SAVE IT FOR FUTURE REFERENCE


# **IMPORTANT SAFETY INSTRUCTIONS**

1. Read all instructions before using.
2. Before connecting the kettle to the power supply, check that the voltage indicated on the appliance (underside the kettle & base) corresponds with the voltage in your home. If this is not the case, contact your dealer and do not use the kettle.
3. The attached base can not be used for other than intended use.
4. Do not operate the appliance without load to avoid damaging the heat elements.
5. Unplug from the outlet when not in use.
6. Do not let the cord hang over edge of table counter or touch hot surface.
7. Do not place on or near a hot gas or electric burner or in a heated oven.
8. Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch it off. If this should occur, allow the kettle to cool before filling with cold water and re-boiling.
9. Ensure that kettle is used on a firm and flat surface where the children can't touch, this can prevent from overturning the kettle to damage the person or kettle.
10. To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs or kettle in water or other liquids.
11. Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.

12. Be careful when opening the lid for refilling when the kettle is hot.
13. Close supervision is necessary when any appliance is used by or near children.
14. Do not touch the hot surface. Use the handle or the button.
15. Extreme caution must be used when moving an appliance containing hot water.
16. The appliance is not a toy. Do not let the children play it.
17. The use of attachments that are not recommended by the appliance manufacturer may result in fire, electric shock or personal injury.
18. While boiling water, avoid to contacting steam from the spout when water is boiling or just after it has switched off. Do not be anxious to uncover the lid.
19. Unplug from outlet when not in use and before cleaning; Allow it to cool before putting on or taking off parts and before cleaning the appliance.
20. Always ensure the lid is closed and do not lift it while the water is boiling. Scalding may occur if the lid is removed during the brewing cycles.
21. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
22. Do not use the appliance for other than intended use.
23. Do not move the unit while the kettle is switched on.

24. The kettle can only use with the stand provided.
25. If the kettle is overfilled, boiling water may be ejected.
26. Do not use the kettle outdoors.
27. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
28. Children should be supervised to ensure that they do not play with the appliance.
29. This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments;
  - Farm houses;
  - By clients in hotels, motels and other residential type environments;
  - Bed and breakfast type environments.
30. Save these instructions.
31. This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.

# Know your kettle

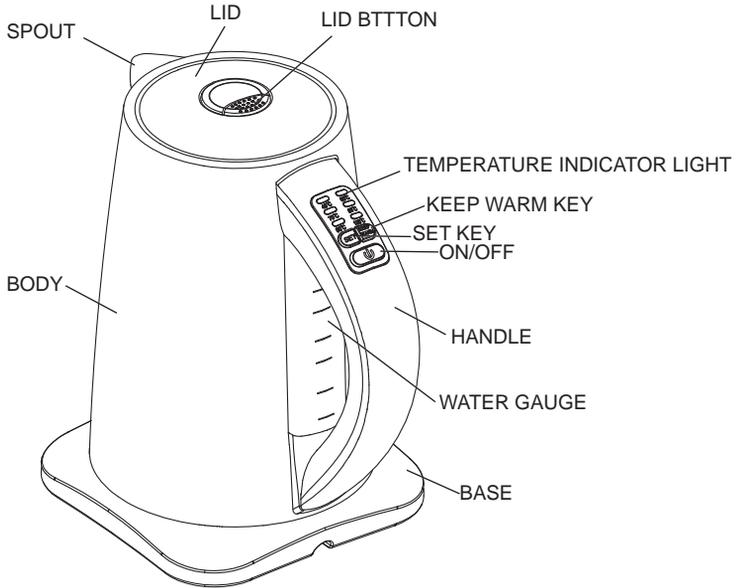

## Before initial use

If you are using the kettle for the first time, it is recommended that you clean your kettle before use by boiling a full kettle of water twice and then discarding the water.

# Operation

1. To fill water into the kettle, remove it from the power base and open the lid by press down the lid button, fill with the desired amount of water to the kettle. Always fill the kettle between the minimum (0.5L) and maximum (1.7L) marks. Too little water will result in the kettle switching off before the water has boiled.

**NOTE: Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the lid is firmly in place before connecting the power cord to the outlet.**

2. Close the lid. Position the kettle on the power base in place. Make sure the kettle contact with the power base completely.

3. Function buttons



## 3.1 Function instruction

This is a full automatic electronic control kettle. It can boil water to the setting temperature and keep warm. The function buttons are designed on the handle, include ON/FF button, “SET” button, “KEEP WARM”button, LED indicating water temperature and working model, include one ON/OFF indicator light, one keep warm indicator light, 6 temperature setting light ,such as “40 °C”、“60 °C”、“70 °C”、“80 °C”、“90 °C”、“100 °C”.Press down the ON/OFF

button, the red indicator light on button bright, and indicating power on. When boiling water, the red indicator light under the setting temperature bright, and indicating which temperature you are setting. When product in the keep warm status, the red indicator light on the “KEEP WARM” button bright. After keep warm for a half hour, product will auto-shut off, or just to press the ON/OFF button to shut off the kettle. Product with memory function .

### 3.2 Electronic control program and operation instruction:

3.2.1. Fill appropriate water (0.5L~1.7L), energize product to make it standby, at this moment, all indicator light is not bright.

3.2.2 Press ON/OFF button, the red indicator light in ON/OFF button and 100°C setting button bright. If do not select the water temperature button, product will gives tacit consent to boil the water to 100°C. After water boil, power auto-shut off without warm keeping function, all indicator light off.

3.2.4. In energizing status, user could select the temperature of “40°C”、“60°C”、“70°C”、“80°C”、“90°C”“100°C” circularly by pressing the button of “set”, indicator light bright on according to the button has been selected. The interval between two buttons pressing is 3s, if the interval is less than 3s, the selection is out of effective. Program will treat the last selection as the temperature request. When the water have not reach the setting

temperature, kettle will start to heat up till reach the request temperature and then automatically stop working, all indicator light shut off and also power auto-shut off.

3.2.5. During kettle in item 3.2/3.3 working state, press down the “keep warm” button to start the keep warm function, indicator for “keep warm” button bright. The keep warm temperature is the temperature has been setting. When the water in kettle reach the setting temperature, the “keep warm” indicator light bright up, remind you product has turned to keep warm state. The warm keeping time is half hour. After half hour, product power auto-shut off, also the indicator light. Remark: product auto-energized the “keep warm” function when temperature setting in 100°C. And the “keep warm” function is begun when water temperature reduce to 90°C (indicator light off when water reach 100°C, indicator light on again when water in 90°C), warm keeping last for a half hour.

3.2.6. After “keep warm” function energized, if press the “keep warm” button at this moment, keep warm setting will be cancel, and the indicator light shut off. Come to program

### 3.3

3.2.7. In product energizing state, press down the ON/OFF

button, product will be shut off, re-press this

Button, product is re-energized. All setting before will be invalid.

3.2.8. Kettle with memory function. When kettle was taken away from power base and was put back within 90 seconds, the keep warm function still works (no need to reset the progress).

## **Boil-dry protection**

Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch it off. If this should occur, allow the kettle to cool before filling with cold water and re-boiling.

## **Care and cleaning**

Always disconnect the appliance from the power outlet and leave it to cool down completely before cleaning.

Never immerse the kettle or cord in water, or allow moisture to contact with these parts.

### **Removal of mineral deposits**

Mineral deposits in tap water may cause the kettle interior to discolor .To remove this build-up, use non-toxic Liquid Descaler.

### **Alternatively:**

1. Fill the kettle with 3 cups of white vinegar and the remainder of water and be allowed to stand overnight. **Do not boil.**

2. Empty the solution from the kettle. Any stains remaining inside the spout can be removed by rubbing with a damp cloth, fill the kettle with clean water, bring to boil and then discard the water. Repeat and the kettle will then be ready to use.

### **Cleaning external housing**

Wipe the external housing with a wild and damp cloth or cleaner.

**CAUTION: Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle.**

### **Cleaning the filter**

Remember to clean the filter with a wild and damp cloth at intervals.

### **Storage**


When not in use or storage, the power cord may be wound around the cord storage under the base of kettle.

## **Environment friendly disposal**



You can help protect the environment!

Please remember to respect the local regulations:  
hand in the non-working electrical equipments  
to an appropriate waste disposal center.

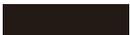

## HOUSEHOLD USE ONLY



Booth No.3H012, Trading Plaza, No.5, Huanan city,  
Pinghu Street, Longgang District, Shenzhen, China  
Facebook Page: <https://www.facebook.com/aicoks/>  
Website: [www.aicok.cc](http://www.aicok.cc)  
**Made In China**