

- Replace the Measuring Cup into position inside the Top Cover after every use.
- Place a large bowl under the Spout so that the edge of the bowl is touching the body of the Popcorn Maker. It is important that the Popcorn ejects down the Spout into the bowl and not re-directed, blocked or otherwise interfered with, since the Popcorn is hot and premature contact may cause minor discomfort.
- Switch On the Popcorn Maker. After a few moments the continuous popping action will automatically feed Popcorn from the Aluminium Heat Chamber out through the Spout until all has popped. This process will last about 3 minutes.
- Turn off the Popcorn Maker and remove the mains plug from the mains supply when popping has stopped.
- If more Popcorn is required, remove the Popcorn remaining in the Aluminium Heat Chamber. Pay attention not to get burnt when handling the Top Cover as this part as well as the Measuring Cup is very hot when the Popcorn Maker is functioning.

NOTE : Wait for approx. 10 to 12 minutes before using the Popcorn Maker again. Please re-heat before popping may make popping better.

The corn flow out with popcorn when popping can be recycled.

WARNING:

- Popcorn is usually very dry.
- Place the Measuring Cup on top of the Top Cover, butter side up.
- Never put the butter into the Aluminum Heat Chamber.

CLEANING AND MAINTENANCE

- Before cleaning, remove the mains plug from the mains supply.
- Make sure the Popcorn Maker has cooled down completely before cleaning.
- Clean the plastic parts of the Popcorn maker with a damp cloth. Never use abrasive products as they could damage the Popcorn maker.
- The Top Cover and the Measuring Cup can be cleaned in warm soapy water.

STORAGE

When the Popcorn Maker is not in use, disconnect the Popcorn Maker and store in a safe, dry place, out of reach of children.



Aicok Home Essentials Live Comfortable

Shenzhen Impression E-commerce Co.,Ltd
Booth No.3H012,Trading Plaza,No.5,Huanan
city,Pinghu Street,Longgang District,Shenzhen,China
Facebook Page: <https://www.facebook.com/aicoks/>
Website: www.aicok.cc
Made In China



AICOK

POPCORN MAKER



TYPE:MY-B001

120V 60Hz 1200W

HOUSEHOLD USE ONLY

KNOW THE POPCORN MAKER



IMPORTANT SAFEGUARDS

- When using electrical appliances, basic safety precautions should always be followed, including the following:
 1. Read all Instructions.
 2. Do not touch hot surfaces. Use handles or knobs.
 3. To protect against electric shock do not immerse cord, plugs in water or others.
 4. Close supervision is necessary when any appliance is used by or near children.
 5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
 6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
 7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
 8. Do not use outdoors
 9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
 10. Do not place on or near a hot gas or electric burner, or in a heated oven.
 11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
 12. Always attach plug to appliance first, then plug cord in the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
 13. Do not use appliance for other than intended use.
 14. A popper that is plugged into an outlet should not be left unattended.
 15. Extreme caution must be used when unloading popcorn. Always turn the unit

over a counter-top so that residual hot oil or water running out will not cause burns.

- 16. A short power-supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- 17. If a long detachable power-supply cord or extension cord is used:
 - 1) The marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of the appliance;
 - 2) If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord.
- All requested breaks must be followed.
- Please refer to the rating label for the maximum continuous usage time (KB 5 min is the maximum usage time).
- The breaks should last at least 10 minutes.
- 18. This appliances are not intended to be operated by means of an external timer or separate remote-control system.
- 19. For safety reasons a damaged or defective supply cord should only be replaced by service centre.
- 20. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

SAVE THESE INSTRUCTION

USING THE POPCORN MAKER

- Place the Popcorn Maker on a level surface.
- Before first use, it is recommended to wipe the Popcorn Maker and accessories with a damp cloth.
- Measure Popcorn using the Measuring Cup provided. One full measure per session is enough. More than one full measure could overflow the Popcorn Maker and disturb the proper functioning of the Popcorn Maker.
- Preheating of the appliance is not necessary.
- Do not add any other ingredients such as: oil, shortening, butter, margarine, salt or sugar, as damage will occur.
- Pour the Popcorn into the Aluminum Heat Chamber through the CORN-IN-LET.