

3 IN 1 SANDWICH MAKER



ST-08

120V 60Hz 750W

MANUAL

AICOK

READ AND SAVE THESE INSTRUCTIONS

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. **Read all instruction manual for the first time**
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electric shock do not immerse cord, plugs, or (state specific part or parts in question) in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries
8. This appliance is household use only
9. Do not let cord hang over edge of table or counter, or touch hot surfaces
10. Do not place on or near a hot gas or electric burner, or in a heated oven
11. Extreme caution must be used when moving an appliance containing hot oil or other liquids
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet
13. Do not use appliance for other than intended use
14. **SAVE THESE INSTRUCTION**
15. Never use the appliance if the supply cord is damaged, It must be replaced by the manufacturer, its service agent or similarly persons in order to avoid a hazard.
16. The appliances is not to be used by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction
17. The appliances are not intended to be operated by means of an external timer or separate remote-control system
18. If a long detachable power-supply cord or extension cord is used:1) The marked electrical rating of the cord or extension cord should be at least as great as the electrical rating of the appliance. 2)If the appliance is with grounding type, the extension cord should be a grounding 3-wire cord .and3) The longer cord should be arranged so that it does not drape over the countertop or table top where it can be pulled on by children or tripped over unintentionally

19. this appliance has a polarized plug (one blade is wider is than the other).To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. if the plug does not fit fully into the outlet, reverse the plug .if it still does not fit ,contact a qualified electrician. Do not attempt to modify the plug in any way

SAFETY INSTRUCTIONS

1. Always operate the appliance on an even surface . Make sure that there is enough ventilation, so that the hot steam can disappear.
2. The temperature of the outer surface may be high when the appliance is working. Please do not touch outer surface by you hand.
3. To avoid the danger of fire ,never leave the appliance unattended.
4. Before connecting with supplier mains, the heating plates must be in a closed position.

PARTS IDENTIFICATION



STEP 1:
Insert top and lower cooking plate into unit and push forward until they slide.



STEP 2:
Snap cooking plates into place by pushing forward the spring latches until on the top and lower cooking plates and releasing them into the slots on the cooking plates.

1. Upper stainless steel panel
2. Upper housing
3. Lock
4. Power light
5. Ready light
6. cooking plate
7. Bottom housing
8. Spring latches
9. Handle Cover
10. Rotation

OPERATING INSRTUCTIONS

1. Uncoil the cable completely
2. Check if the heating plates are clean and dust-free. if necessary ,wipe them with a damp cloth
3. Place the appliance on a flat, level surface and make the locking hook open
4. This sandwich toaster incorporates an interchangeable cooking plate. Choosing your desired cooking plate, which is dependent on the task to be performed
 - 1) Open the appliance
 - 2) Insert top and bottom cooking plates into appliance and push forward Spring latches until they slide into place

3) Snap cooking plates into place by pushing forward the spring latches on the top and bottom cooking plates and releasing them into the shrapnel on the cooking plates

4).Close the appliance

5. Connect the plug into rated voltage and the cooking surface begins pre-heating and the red and green lamp will be illuminated at the same time. Once the cooking surface has reached the preset temperature(usually it will take about 3~5 minutes),the green lamp will not be illuminated and this sandwich maker is ready to cooking. .
6. Open the appliance and place your food on the lower plate
7. Close the appliance and lock the handle, at this time,the green lamp will be illuminated again
8. After baking about 7~10 minutes, open the appliance to remove your food with a wooden or plastic spatula. Of course, You can adjust the time to suit an individual taste ,different food types, thickness,your taste ect.
9. After cooking, open the lock to remove your food with a wooden or plastic spatula.
10. After using, pull out the plug and open the upper lid let it get cool.

CAUTION:

1. Depending on the thickness of your food, takes approx.ten minutes
2. The first heating process should take place without any foodstuffs, let it heat for about ten minutes. There may be a slight development of smoke or smell. This is normal and harmless
3. Before unplugging the plug until the red light was lit, and the green lamp will be on and off during power.
4. If too much food is inserted into the appliance and the sandwich toaster cannot be closed, never close it with undue force as this could damage the lock
5. Never use sharp fork or knife to remove the food as this would damage the non-stick coating of cooking surface. Use heat-resistant wood or plastic utensils only.
6. Always unplug the appliance from the power socket when not in use

CLEANING AND MAINTENANCE INSTRUCTIONS

11. Be aware that parts of the appliance become very hot during operation. Make sure that the appliance is switched off, unplugged and wait for it to completely cool down before cleaning or storage

12. Wipe the cooking surface with a soft damp cloth every time after use. If it is difficult to remove residues, use a little oil can soften it
13. Do not use any spray-on metal objects as they would damage the non-stick coating
14. In case of any problem, please contact the authorized service center for help

AICOK



Aicok Home Essentials Live Comfortable
Shenzhen Impression E-commerce Co.,Ltd
Add: Booth No.3HQ12,Trading Plaza.No.5,Huanan
city,Pinghu Street,Longgang District,Shenzhen,China
Facebook Page: <https://www.facebook.com/aicoks/>
Website: www.aicok.cc



HOUSEHOLD USE ONLY

Made In China

