

AICOK

MINICHOPPER
INSTRUCTION MANUAL

MC355A-GS

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using.
- Do not open until blades stop.
- The attached motor unit can not be used for other than intended use.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not let the cord hang over the edge of a table or counter or touch a hot surface.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- keep hands and utensils away from the cutting blade while chopping food to reduce the risk of severe injury to persons or damage to the food chopper. A scraper may be used but only when the food chopper is not running.
- To protect against a fire, electric shock or personal injury, do not immerse cord, electric plugs, or motor unit in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- The appliance is not a toy. Do not let the children play it.
- Avoid contacting moving parts.
- The use of attachments not recommended or sold by manufacturer may cause fire, electric shock or injury.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner, Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- Do not use the appliance for other than intended use.
- Be sure motor unit is locked securely in place before operating appliance.
- Do not attempt to defeat the lid interlock mechanism.
- Do not use outdoors.
- Do not stir the liquid.
- This appliance can be used by children aged from 8 years and

above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.


- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning;
- Do not allow children to use the blender without supervision;
- Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
- Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning

. SAVE THESE INSTRUCTION.

DO NOT OPEN UNTIL BLADES STOP.

HOUSEHOLD USE ONLY

KNOW YOUR FOOD CHOPPER

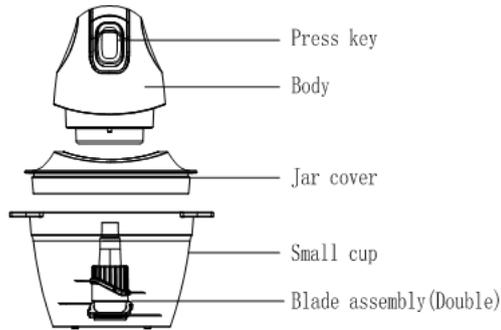

BEFORE THE FIRST USE

Before using this appliance for the first time, wash the bowl and blade assembly in sudsy water and dry thoroughly, all of these parts are safe in dishwasher, wipe the motor unit with a damp cloth, do not immerse the motor unit in water.

HOW TO CHOP OR MINCE FOOD

1. Place the bowl on a counter or other flat surface, then slide the blade down over the shaft in the bowl. Be careful not to touch the blade as it is extremely sharp.
2. Place dry food in the bowl, the desired food refers to the chopping guide.
3. Position the motor unit onto the bowl, lining up the motor unit locking tabs to the bowl locking slots till the motor unit locks.
Note: For your protection, this unit has a lid locking system, the unit will not operate unless the tabs in the motor unit and slots in the bowl align. Do not attempt to operate the unit without locking the motor unit in place.
4. Depress and hold the pulse button to process.
Note: This product has a "pulse action" feature. Avoid running the motor continuously in this mode for period over 1minutes. the longer the continuous pulse, the finer the texture. For coarsely chopped foods, use short pulses.
5. Be sure the blade stops rotating completely before removing the motor unit. Unplug the unit. Remove the motor unit and grasp the plastic blade hub. carefully pull the blade assembly out. Remove the bowl and empty the processed food. Do not use bowl for storing food.

Note:Work for 15 seconds and then rest for 1 minute.

Assembling or Disassembling operation instructions

1.Assembling method

A. S-shape blade holder 1 (Fig.1)

B. S-shape blade holder 2 (Fig.2)

C. Assemble the S-shape blade holder 2 (Fig. 1) onto the S-shape blade holder 1 (Fig. 1):

Grasp the top part of S-shape blade holder 2 (Fig.1) with finger and then the position of the slot .(Fig. 3), after it, rotate it to the left to lock it well in position (Fig.4).

Note: Please follow the operating instruction to avoid the finger being hurt.



Fig.1

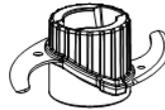


Fig.2

Grasp the top part with your finger and then align the position of the slot .

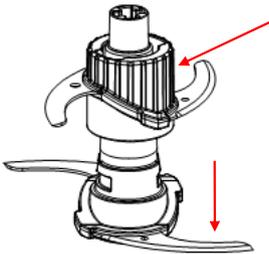


Fig.3

Grasp the S-shape blade holder 2 with finger and rotate it to the left to lock it well in position.

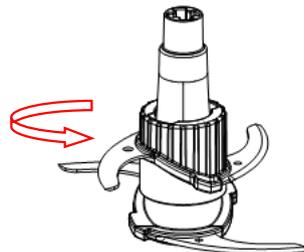


Fig.4

2.Disassembling method

A. Disassemble the S-shape blade holder 2 (Fig.1) from the component shown in Fig.6:

Firstly, grasp the S-shape blade holder 1 with left finger and then grasp the top part S-shape blade holder 2 and rotate it to the right to unlock, after it, lift the S-shape blade holder 2 upwards to remove.

Note: Please follow the operating instruction to avoid the finger being hurt.

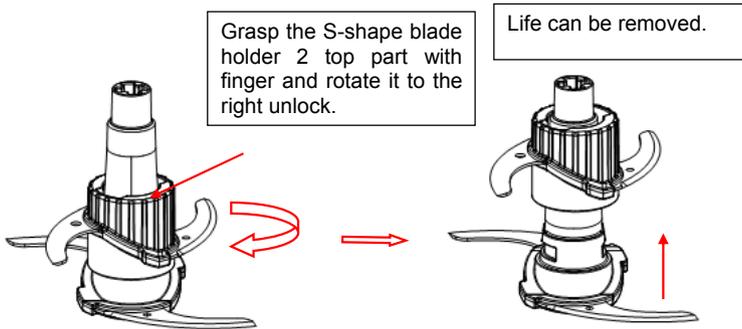


Fig.4

Fig.3

CLEANING AND MAINTENANCE

Always disconnect the appliance from the power outlet before cleaning.

Wash the bowl, blade assembly immediately after use either with warm/sudsy water or in the dishwasher. Wipe off the motor unit with a damp cloth- do not immerse in water.


NOTE: Do not use chemical, steel, wooden or abrasive cleaners to clean the unit to prevent the gloss loss.

CHOPPING GUIDE

FOOD TYPE	PREPARATION HINTS
Bread fresh, toasted or stale	Use 1 slice at a time, torn into several pieces(to size 20*20mm),ON 15seconds OFF 1min until desired chop is reached
Fruits and vegetables Canned	Drain up to 200g and process 15seconds ON 1min OFF until pureed as desired. Pulse or process up to 200g chunked fruits or vegetables ON 15seconds OFF 1min until desired chop is reached.
Fresh	(cut to size 20*20mm)
Parsley and other leafy herbs	Wash and dry thoroughly then pulse or process up to 200g ON 15seconds OFF 1min until desired chop is achieved(cut to size 20*20mm).
Beef	Pulse or process up to 200g(cut to size 20*20mm) ON 15seconds OFF 1min until desired chop is reached
Cookies, crackers	Pulse or process up to 12 cookies or crackers(to size 20*20mm) ON 15seconds OFF 1min until desired chop is reached.

NOTE:The main body and cup shall be placed separately to avoid unpleasant odour entering into the cup when there is food in the cup.

Environment friendly disposal

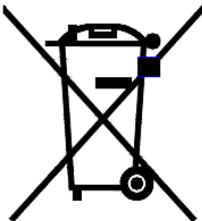

You can help protect the environment!
Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.



Aicok Home Essentials Live Comfortable

Shenzhen Impression E-commerce Co.,Ltd
Booth No.3H012,Trading Plaza,No.5,Huanan city,
Pinghu Street,Longgang District,Shenzhen,China
Facebook Page: <https://www.facebook.com/aicoks/>

Website:www.aicok.cc

Made In China