

材质: 105铜版纸
 印刷: 单黑双面印刷
 装订方式: 风琴折页
 尺寸: 148 X 210mm
 注: 按正反顺序装订打印


正面

AICOK

Manual

TB10S Blender

Aicok Home Essentials Live Comfortable

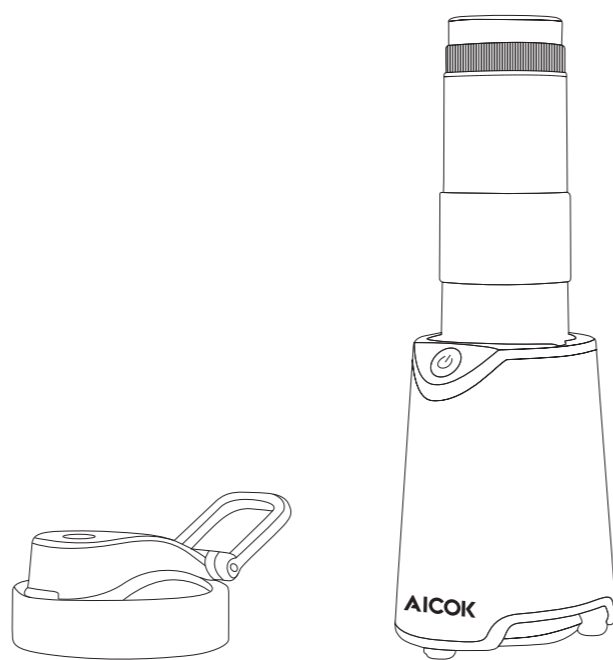

Important safeguard:
Before using the electrical appliance, the following basic precaution should always be followed including the following:

- Read all instructions first.
- Before use, check that the voltage of your wall outlet correspond to the rated voltage manner.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- To protect against risk of electrical shock do not put in water or other liquid.
- Do not let cord hang over edge of table or counter or touch hot surface.
- To reduce the risk of electric shock, never operate this product with wet hands, spill liquid in the product or submerge it in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with or touch the appliance.
- Pay more attention on the running appliance, never leave appliance unattended
- Do not place an appliance on or near a hot gas or on a heated oven.
- Do not use outdoors, household use only.
- Never operate the product when the cup is empty and do not remove the cup lid before the blades come to a complete stop.
- Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
- Avoid contacting moving parts.
- Warning: misuse may cause serious injury. Care is needed when handling cutting blades, especially when removing the blade from the bottle, emptying the bottle and during cleaning.
- Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender.
- Blades are sharp. Handle carefully.
- To reduce the risk of injury, never place cutter-assembly blades on base without jar properly attached.
- Always operate blender with cover in place.
- Always operate appliance on a flat surface.
- Never use any attachments which are not listed on the instruction book. The use of attachments, including canning jars, etc., not recommended by the manufacturer may cause a risk of injury to persons
- Do not blend hot liquids.

Save these instructions

Usage of the blender

WARNING
 The power plug can be inserted into a mains outlet socket Only after Sport Bottle is securely installed on Blender Base as per below procedure; and before remove Sport Bottle from Blender Base, unplug the unit from mains outlet socket.

- Place the sport bottle on a flat surface, open the bottle.
- Fill the bottle with your favorite ingredients, all the ingredient must be filled below the bottle max level mark.
- Fasten the blade base on the open end of the bottle.
- Turn the bottle upside down, put the bottle and blade base together on the blender base, ensure the three micro switch block in right position.
- Press the pulse button to start the machine, during operating, your finger need to press the button.
- Do not operate the blender without loading.
- If you want to stop the machine, please leave your finger from the pulse button.
- After blend, turn the bottle over and place on a flat surface, take out the blade base, put the drinking lid on.

- EN -
- EN -

反面

Model: TB10S

Wichtige Sicherheitshinweise
Beim Einsatz elektrischer Geräte sind grundlegende Vorsichtsmaßnahmen zu befolgen. Dazu gehören folgende Maßnahmen:

- Lesen Sie die Bedienungsanleitung vollständig durch.
- Überprüfen Sie vor dem Anschluss an die Stromversorgung, ob die auf dem Typenschild des Gerätes angegebene Spannung mit der Spannung Ihrer Stromversorgung übereinstimmt.
- Betreiben Sie elektrische Geräte niemals mit beschädigten Kabeln oder Steckern, wenn ein Gerät nicht ordnungsgemäß funktioniert, zu Boden gefallen ist oder wenn es in irgendeiner anderen Weise beschädigt wurde.
- Wenn die Anschlussleitung dieses Gerätes beschädigt wird, muss sie durch den Hersteller oder seinen Kundendienst oder eine ähnlich qualifizierte Person ersetzt werden, um Gefährdungen zu vermeiden.
- Lassen Sie die Anschlussleitung nicht über die Kante von Tisch oder Arbeitsoberfläche hängen. Achten Sie darauf, dass die Anschlussleitung keine erhitzten Oberflächen berührt.
- Um die Gefahr von Stromschlägen zu mindern, betreiben Sie das Gerät bitte nicht mit nassen Händen. Achten Sie darauf, das Gerät nicht mit Flüssigkeit zu bespritzen und tauchen Sie es nicht in Wasser ein.
- Dieses Gerät ist nicht dafür bestimmt, durch Personen (einschließlich Kinder) mit eingeschränkten physischen, sensorischen oder geistigen Fähigkeiten oder mangels Erfahrung und/oder mangels Wissen benutzt zu werden, es sei denn, sie werden durch eine für ihre Sicherheit zuständige Person beaufsichtigt oder erhielten von ihr Anweisungen, wie das Gerät zu benutzen ist.
- Kinder sollten beaufsichtigt werden, um sicherzustellen, dass sie nicht mit dem Gerät spielen.
- Das Gerät nie auf oder in die Nähe eines heißen Gas- oder Elektro-Herds oder in den heißen Backofen stellen.
- Dieses Multifunktionsgerät eignet sich nicht nur zum Mixen. Sie können Lebensmittel auch zerkleinern, schneiden oder zerhacken.
- Nicht im Freien benutzen (Nur für den Gebrauch in trockenen Räumen geeignet).
- Das Gerät niemals mit leerem Behälter einschalten. Niemals den Behälterdeckel entfernen, ehe die Klingen vollständig still stehen.
- Es muss mit den Schneidmessern achtsam umgegangen werden, insbesondere beim Herausnehmen des Messers aus der Schüssel, beim Leeren der Schüssel und beim Reinigen.
- Betreiben Sie das Gerät nicht unbeaufsichtigt. Ziehen Sie den Netzstecker, bevor Sie Zubehör anbringen oder entfernen und bevor Sie Reinigungsarbeiten am Gerät durchführen.
- Dieses Produkt sollte nicht von Kindern bedient werden. Gerät und Anschlussleitung bitte von Kindern fern halten.
- Das Gerät kann von Personen mit verringerten physischen, sensorischen oder mentalen Fähigkeiten oder Mangel an Erfahrung und/oder Wissen benutzt werden, wenn diese beaufsichtigt werden oder bezüglich des sicheren Gebrauchs des Gerätes unterwiesen wurden und die daraus resultierenden Gefahren verstanden haben.
- Kinder dürfen nicht mit dem Gerät spielen.
- Dieses Gerät kann von Kindern ab 8 Jahren und von Personen mit verminderten körperlichen, sensorischen oder geistigen Fähigkeiten oder mit Mangel an Erfahrung und Wissen bedient werden, wenn sie beaufsichtigt werden oder auf den sicheren Gebrauch des Gerätes hingewiesen wurden und die damit verbundenen Gefahren kennen. Kinder dürfen nicht mit dem Gerät spielen. Die Reinigung und Anwendung dürfen von Kindern nicht ohne Aufsicht durchgeführt werden.
- Diese Anweisungen bitte aufbewahren.

Nutzung des Mixers

- Den Behälter korrekt auf dem Motorsockel positionieren.
- Falls Ihre Zutaten nicht richtig vermischt sind, einfach den Behälter mehrmals schütteln.
- Keinen Teig oder Mehl/Stärke mit dem Gerät verarbeiten, da dies zur Überlastung des Motors führt.

Hinweise

- Das Gerät darf nur 1 min (Mixer-Funktion) und 30s (Kupfer-Funktion) betrieben werden. Vor dem erneuten Gebrauch bitte abwarten, bis es sich abgekühlt hat.

Notes

- The appliance is only permitted to use 30's continuously maximum. Before it's used again, it must cool down enough.
- Bottle and cap are dishwasher safe.
- Only for liquid like water, milk and soft fruits like Apple, banana, carrot, etc.. Cut fruit first in pieces.
- If for cool drink, please sure the ice cube not large than 2*2cm, and please put some liquid together with the ice, ice weight recommend no more than 90g one time
- When overload, motor will automatically stop, please unplug, empty cup, wait for 15 minutes to cool down motor, after can use again.



Parameters

Model	TB10S
Rated Voltage	220-240V
Rated Power	300W
Frequency	50/60Hz
Capacity	570ml Plastic jar
Dimension	225 x 135 x 230

Cleaning

- Unplug the appliance from wall outlet before cleaning.
- After use, clean the main body with wet towel and dry it with dry towel. Absolutely keep away from water or high humidity.
- Wash the cup and blade part in running water.
- Keep children away from the combined cup and blade.
- Don't clean it with "thinner" or "benzene" etc.
- Keep away from direct sunlight and damp place.
- Never immerse the Base (Motor unit) or power cord into water for cleaning.

Correct Disposal of this product

	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.
	Class II appliance symbol

- DE -
- DE -

Shenzhen Impression E-commerce Co., Ltd
 Booth: No.3H012, Trading Plaza, No.5, Huanan City,
 Pinghu Street, Longgang District, Shenzhen, China
 Facebook Page: <https://www.facebook.com/aicoks/>
 Website: www.aicok.com

